



- 1 **Flashlight**
- 2 **Speaker**
- 3 **Display (Screen)**
- 4 **Navigation Ring**
  - Navigating in the Menu
- 5 **Left function key at the top**
  - To select the **Option** that is shown at the bottom left of the screen
  - Power Saving Mode Enabled: Screen On
- 6 **Call function key**
  - Start a call or answer a call
  - In Standby: press to open **Call History**
- 7 **Middle function key**
  - Press to confirm a selection
  - Activate Handsfree when making phone calls
- 8 **Right function key at the top**
  - To select the **Option** that is shown at the bottom right of the screen
  - In the menu: press to exit or go back
  - When writing: Delete input

- 9 **End Call Function key**
  - During a call: Press to end the call
  - In Menu: press to exit
  - Press and hold: To turn the device on or off
- 10 **1-button/answering machine**
  - Long press: to call voicemail
- 11 **Star button**
  - Used to enter + for international calls press 2 times (Int. code, eg. +44 for UK)
  - When writing special characters
- 12 **0 button**
  - Long press: Flashlight on or off
- 13 **HASH button**
  - When writing: Press to toggle between uppercase, lowercase and digits
  - Long Press: Change Sound Profile

#### ICONS ON THE DISPLAY

- Signal strength indicator
- Roaming (abroad)
- Battery indicator
- Missed call
- New message
- Profile: silent (mute)
- Profile: vibration function
- Profile: outside
- Profile: in the house
- Alarm clock on
- Call forwarding
- Bluetooth

#### SETTING UP YOUR PHONE

- Remove the battery cover (apply pressure in the centre of the cover and push to slide down).
- Insert the SIM card(s) into the holder as illustrated.
- Insert your SD card (max. 2 GB) into the memory card holder with the gold contacts facing down.
  - **SIM slot-1** should be chip side facing down.
  - **SIM slot-2** should be chip facing upwards.
- Insert the battery, making sure that the battery contacts touch the phone's gold contacts.
- Place the battery cover so that the clips locate and slide the cover upwards to secure.
- Before you use the phone for the first time, charge the battery for at least 4 hours.

#### MANAGE 2 SIM CARDS AND PROFILES

You will be able to receive calls from either SIM profile.

When making a call or sending a TEXT message you will be prompted to select the SIM profile that you want to use [**SIM 1** or **SIM 2**].

If you use different networks for each SIM card, the network name is displayed clearly below the **SIM 1** or **SIM 2** selection to make identification easy.

